

ALWAYS HAVE A BACKUP. NEVER LOSE A SALE.

NO OEM FILTER? NO PROBLEM.

Don't lose time or sales tracking down OEM parts. With Qik-Fit in your garage or shop, you'll always have the right cabin air filter in stock.

Use Qik-Fit as your replacement filter backup to keep customers happy and business running smoothly.



Just measure and rip along the perforated lines to easily create a replacement cabin air filter for nearly any car.

- $\boldsymbol{\cdot}$ Meets MERV 9 rating when tested against leading OEM brands.*
- Patented filtration technology reduces odor, dirt, dust and debris.
- Meets or exceeds efficiency ratings (3 microns 10 microns) compared to leading OEM brands.*
- Cabin air replacement filter for most vehicles.


*Based on third party independent laboratory testing ASHRAE 52.2 - 2017 and ISO/TS 11155- 1:2001 Part 1.

INSTALLATION IS AS EASY AS 1-2-3



EASY INSTALLATION. EFFECTIVE FILTRATION.

Scan the code to see Qik-Fit's easy install process for yourself.

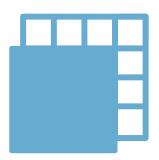

STEP 1: Lay the customer's existing filter over the 10" x 10" Qik-Fit filter as a guide.





STEP 2: Tear away the excess material along the perforations to match the exact size of the filter.

STEP 3: Install the new Qik-Fit cabin air filter in the vehicle and apply the installation sticker.